

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06

Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курган (3522)50-90-47
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13

Россия +7(495)268-04-70

Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Ноябрьск (3496)41-32-12
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37

Казахстан +7(7172)727-132

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саранск (8342)22-96-24
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97

Киргизия +996(312)96-26-47

Тверь (4822)63-31-35
Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Улан-Удэ (3012)59-97-51
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

crn@nt-rt.ru || <https://lcmeter.nt-rt.ru/>



Optical Air Eliminator (US Patent #7000628) Refined Fuels Applications (A8981, A8981A)



Table of Contents

Introduction	Maintenance
Specifications 3 General Information 3 How Optical Air Eliminators Work 4	Disassembly..... 11 Reassembly 13 Troubleshooting 14
Installation	Bill of Materials
New Installations 6 Retrofit Installations 6 Dimensional Drawing 8 Wiring 9	Exploded View 15 Bill of Materials..... 15

! WARNING

- Before using this product, read and understand the instructions.
- Save these instructions for future reference.
- All work must be performed by qualified personnel trained in the proper application, installation, and maintenance of equipment and/or systems in accordance with all applicable codes and ordinances.
- Failure to follow the instructions set forth in this publication could result in property damage, personal injury, or death from fire and/or explosion, or other hazards that may be associated with this type of equipment.

Publication Updates and Translations

The most current English versions of all Liquid Controls publications are available on our web site, . It is the responsibility of the local distributor to provide the most current version of LC manuals, instructions, and specification sheets in the required language of the country, or the language of the end user to which the products are shipping . If there are questions about the language of any LC manuals, instructions, or specification sheets, please contact your local distributor.

Optical Air Eliminators (A8981 & A8981A)

Environmental Rating

NEMA 4X

Safety

Designed to meet Class I, Division 2 requirements

Materials of Construction

Class 1

Body: Aluminum

Solenoid: Brass

Class 2

Body: Anodized Aluminum

Solenoid: Stainless Steel

Pressure Rating

Maximum non-shock working pressure

- 150PSI (10.3BAR)

Maximum differential pressure

- 100PSI (6.9BAR)

Temperature Rating

-40° to 160°F (-40° to 71°C)

Products

Class 1 Refined Fuels

Gasoline, Gasohol, Diesel fuel, and Fuel Oil

Class 2 Aviation

Av-Gas and Jet Fuel

Solenoid (S3)

Voltage: +12 (± 2)VDC

Optional: +24 (± 4)VDC

Current: 1A maximum

Optical Sensor

Voltage: +10 to +28VDC

Current: 0.5A maximum

General Information

The Liquid Controls Optical Air Eliminator is designed for use with LectroCount® Electronic Registers. An optical sensor, installed in the wall of the air eliminator housing, is used to monitor the liquid level. The presence or absence of liquid at the sensor level activates or deactivates

a solenoid valve located at the top of the air eliminator to vent air or vapor from the system.

The optical air eliminator is designed to work with Liquid Controls M5, M7, M10, M15, and M25 meters, for applications measuring refined petroleum products. Designed with the same mounting dimensions as Liquid Controls mechanical air eliminators, the optical air eliminator does not require plumbing changes to retrofit to existing meter installations; however, electronic registers do require CPU

board part number 81920 for LCR and LCR-II; CPU board

part number 81924 for LC³. The optical air eliminator also

requires the use of a solenoid-operated control valve such

as the E-7 or A2848-11 on the outlet side of the meter.

Class 2

The Liquid Controls Optical Air Eliminator can be manufactured for Class 2 aviation applications. The Class 2 optical air eliminator (Part #A8981A) is made with an anodized aluminum housing and a stainless steel solenoid valve.

Introduction

How the Optical Air Eliminator Works

A solenoid valve, located at the top of the air eliminator, is either open or closed. When the liquid level is below the optical sensor (Figure 1), and a delivery is initiated, the solenoid valve opens and vents air and vapor to atmospheric pressure. At the same time, a solenoid-actuated control valve (A2982-11 or A2848-11) closes at the meter outlet.

When liquid rises to the optical sensor level as the air is exhausted (Figure 2), the optical air eliminator solenoid valve closes and prevents continued venting to atmospheric pressure. At the same instant, the control valve at the meter outlet opens so that a delivery may begin or continue. This functionality ensures that only liquid passes through the meter for measurement.

As long as a delivery is active and the liquid level remains at or above the optical sensor, the optical air eliminator solenoid valve remains closed and the control valve remains open. If the liquid level should drop below the optical sensor, the optical air eliminator solenoid valve opens and the control valve closes. When the delivery is complete, the control valve closes and the printer prints a delivery ticket. The optical air eliminator solenoid valve is not active between deliveries and remains OFF or closed.

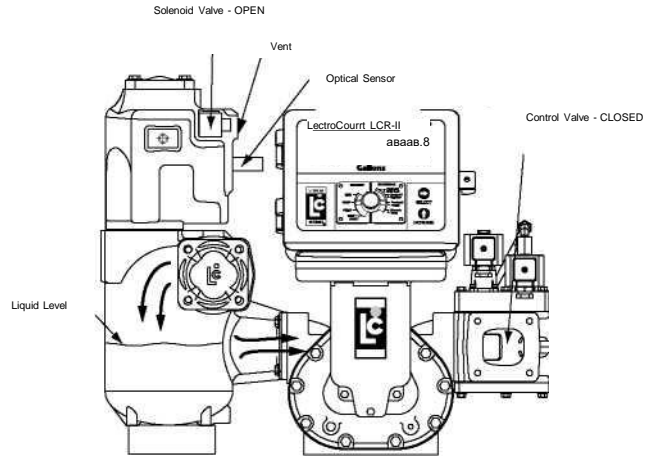


Figure 1: Liquid Level below Optical Sensor

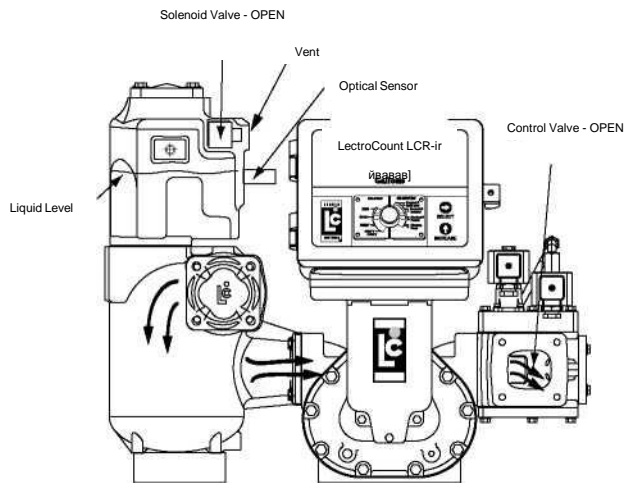


Figure 2: Liquid Level at or above Optical Sensor

Introduction

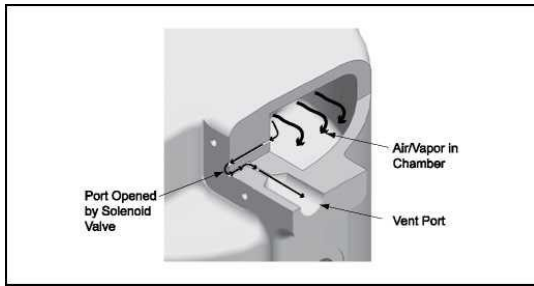


Figure 4: Solenoid and Port Open

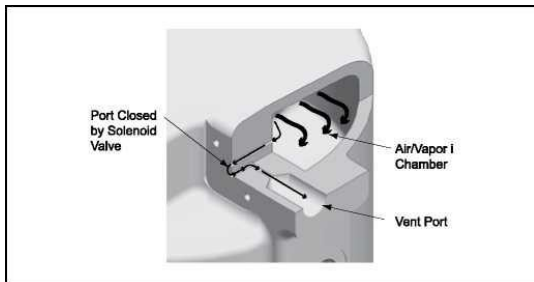


Figure 5: Solenoid and Port Closed

How the Optical Air Eliminator Works

The figures to the left show a cutaway view of the vent port through the solenoid valve. This port has been designed to optimize the venting of air and vapor from the optical air eliminator.

When the liquid level is below the sensor, the S3 solenoid valve is open and allows air and vapor to vent through the solenoid valve as shown in Figure 4. When the liquid level is at or above the optical sensor, the S3 solenoid valve closes the vent path as shown in Figure 5.

The diagram in Figure 6 shows the LectroCount register logic for a preset delivery. In order to function properly, the optical air eliminator must be used in conjunction with a solenoid-actuated control valve at the meter outlet, such as the A2982-11 or A2848-11.

Optical Air Eliminator	Solenoid 3	Open (ON)	Closed (OFF)	1 1 I I End of delivery. I 1 Solenoid not active (closed)
	Optical Sensor	Fluid Below (Level Rising)	Fluid Level At or Above Sensor	1 1 End of delivery. I I
	A2982-11 or A2848-11 Two-Stage Valve	Solenoid 1 Solenoid OFF	Solenoid ON	i i * I I 1 1 Solenoid OFF I I
	Solenoid 2	Solenoid OFF	Solenoid ON	Solenoid OFF
	Flow	Full Flow	Dwell Flow	Solenoid ZERO Shutoff is Self Adjusting No Flow

Figure 6: Optical Air Eliminator operating sequence.

Installation

New Installations

When ordered with a new meter, the optical air eliminator is supplied mounted atop a strainer on the inlet side of the meter. An example is the meter with high-capacity strainer, two-stage valve, and LectroCount LCR-II® Electronic Register shown in the figure to the right.

A vent line must be connected from the output port of the optical air eliminator. This connection is 1/2" NPT. The vent line must be connected to an appropriate receptacle such as an overflow tank on a truck.

The optical air eliminator solenoid valve and optical sensor are supplied pre-wired to the LectroCount Electronic Register.

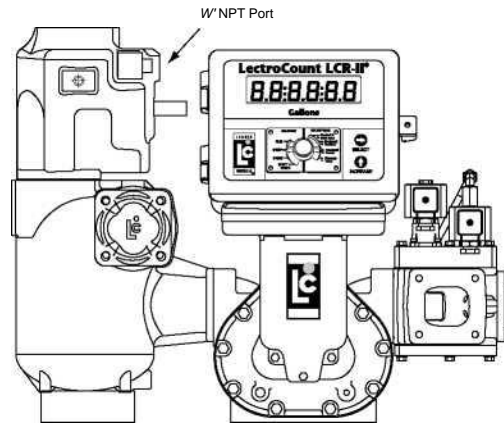


Figure 7: New Assembly

Retrofit Installations

Depending on the existing configuration, adding an optical air eliminator valve may require modification of the vent piping, modification or change of the outlet valve, and modification or change of the register.

The optical air eliminator requires the following components to operate:

- LectroCount LCR/LCR-II Electronic Register with internal CPU board Part Number 81920 or LC³ with CPU board Part Number 81924.
- Electronically-controlled outlet valve such as the A2982-11 or A2848-11.

Refer to the manuals accompanying these items for proper installation and configuration.

! WARNING

Before disassembly of any meter or accessory component, **ALL INTERNAL PRESSURES MUST BE RELIEVED AND ALL LIQUID DRAINED FROM THE SYSTEM IN ACCORDANCE WITH ALL APPLICABLE PROCEDURES.**

Pressure must be 0 (zero) psi. Close all liquid and vapor lines between the meter and liquid source.

Failure to follow this warning could result in property damage, personal injury, or death from fire and/or explosion, or other hazards that may be associated with this type of equipment.

Installation

Retrofit Installations

These retrofit instructions will show a system using a Hi-Cap strainer/air eliminator; however, the optical air eliminator may also be installed on other LC strainer assemblies used for refined petroleum products.

Step 1 - Remove Old Air Eliminator and Baffle Cup

After the internal pressure has been relieved from the system and the assembly drained of liquid, remove the four bolts and washers used to fasten the old air eliminator to the top of the strainer. Inspect the O-ring and replace if necessary.

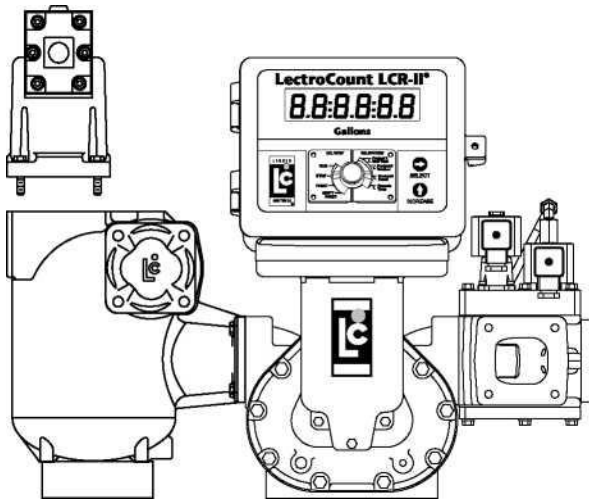


Figure 8: Remove old Air Eliminator

Step 2 - Mount the Optical Air Eliminator

Depending on the strainer being used, the optical air eliminator may be fastened to the strainer/air eliminator in any of four 90° rotational increments. Select the most suitable orientation for ease of final installation of wiring and vent piping.

Fasten the optical air eliminator to the strainer using the four bolts and washers. Tighten the bolts to a torque of 27 lbf-ft (37 Nm).

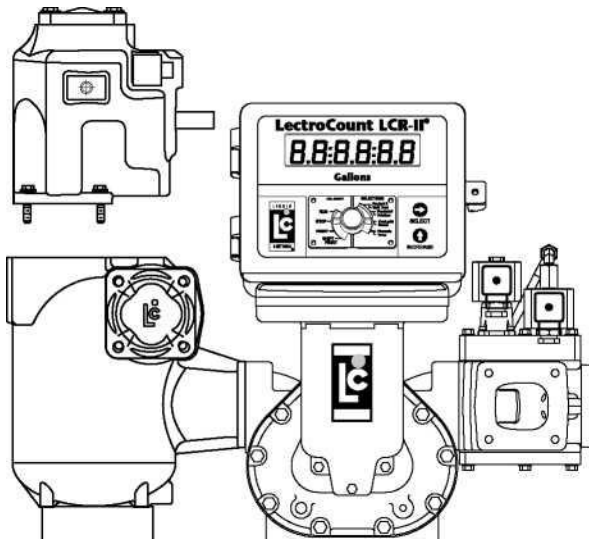


Figure 9: Orient the Optical Air Eliminator

Step 3 - Connect the Vent Piping/Tubing

This connection is 1/2" NPT. Remove the pipe thread protector and then connect the piping/tubing to the vent port. This piping typically connects directly to an overflow tank on a truck.

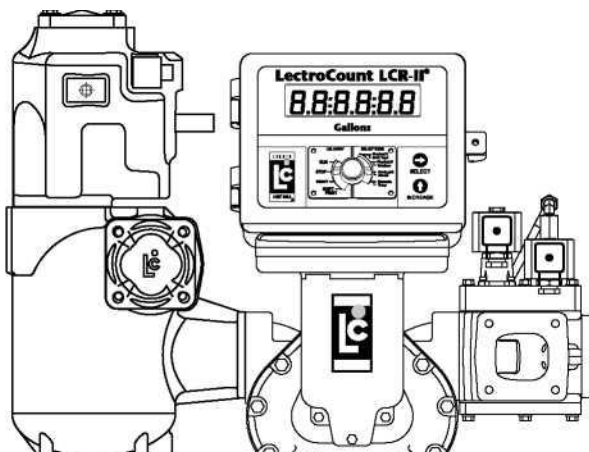



Figure 10: Fasten the Optical Air Eliminator

Step 4 - Wire the Solenoid and Sensor to the Register


Wiring instructions begin on Page 9.

Dimensions


FRONT

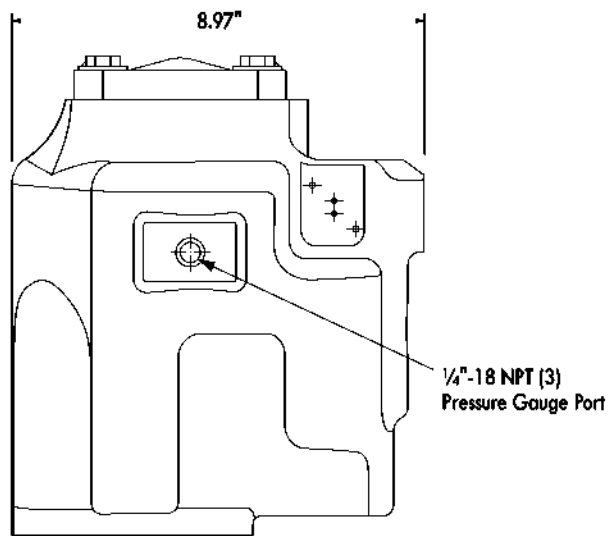


SIDE

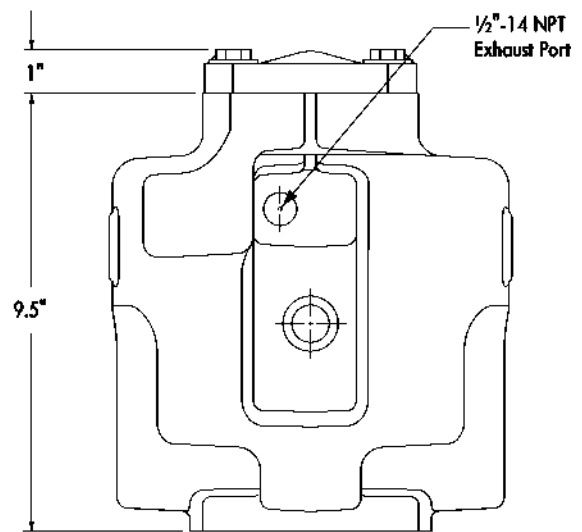

BOTTOM

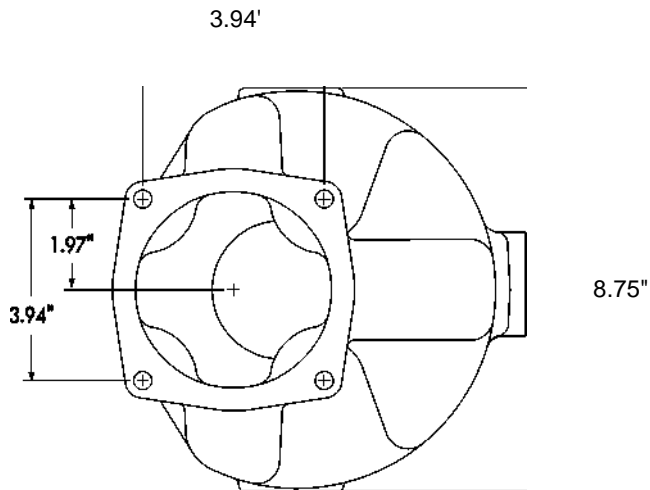

OPTICAL AIR ELIMINATOR WITH HIGH CAPACITY STRAINER

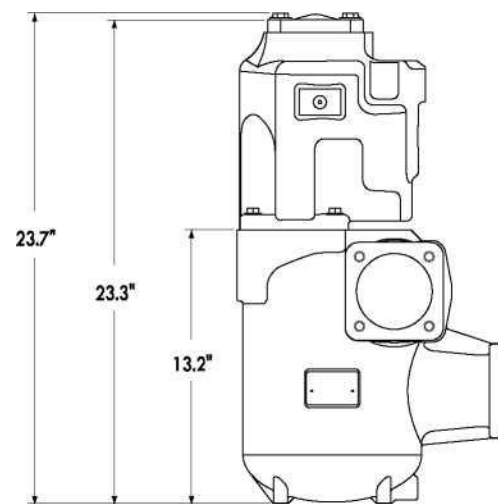

Dimensions shown are not for construction use.
Consult factory when certified Engineering Drawings are required.

Installation

Wiring

The optical air eliminator requires a LectroCount LCR/ LCR-II Electronic Register with CPU board part number 81920 (LC³ with 81924). If the LectroCount does not contain an 81920 CPU board (LC³ with 81924), this board

must be ordered as a replacement to the existing CPU board.

The 81920 CPU board has an additional connector, connector J15, not present on other board models. On the LC³ 81924 CPU board it is connector J11.

To make the connection to a LectroCount Register, the optical sensor comes supplied with a 24" cable. The cable

is potted in the optical sensor assembly at one end. A threaded cord grip is included to fasten the other end of the cable into the back of the LectroCount Register. The solenoid requires a 12 AWG, two-wire, braided cable,

Step 1 - Remove Cable Plug

Loosen and remove the screw from the cover of the S3 solenoid valve cable plug. Remove the cable plug from the solenoid valve coil. Remove the cover from the cable plug housing and then remove the terminal block. Be sure to note its orientation in the housing. Leave the flat gasket in place on the coil.

Step 2 - Connect Cable to Cable Plug


Route one end of the cable through the conduit fitting and into the cable plug housing. Connect the cable wires to the terminal block. Connect the BLACK wire to Terminal 2 and the RED wire to Terminal 1. These indicators are marked on the terminal block.

Caution

Incorrect wiring can damage the optical sensor.

! WARNING

For North American Installations, the installation must be fully in accordance with the National Electrical Code (US) or the Canadian Electrical Code respectively to maintain the hazardous location ratings on the product. This may involve using rigid conduit for all connections.

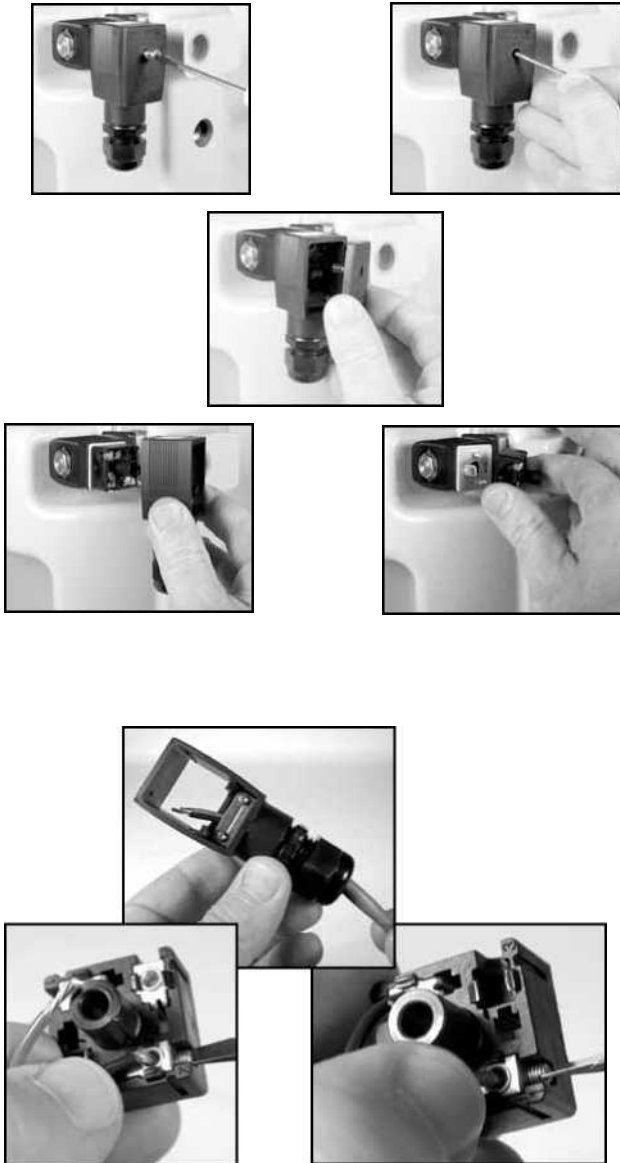

Installation

Wiring


Step 3 - Reassemble Cable Plug

Reinstall the terminal block into the cable plug housing in the same orientation you found it. Tighten the strain relief strap inside the cable plug using the two screws. Tighten the cable gland on the bottom of the cable plug so that it seals around the cable.

Reconnect the cable plug to the coil. Place the cover over the cable plug and fasten with the screw to a torque of 8.8 in-lbs (1 Nm).

Step 4 - Connect to LectroCount Electronic Register

Route the cables from the optical sensor and solenoid valve to the back of the LectroCount register. Connect these to two open ports on the back of the register using the appropriate connectors.

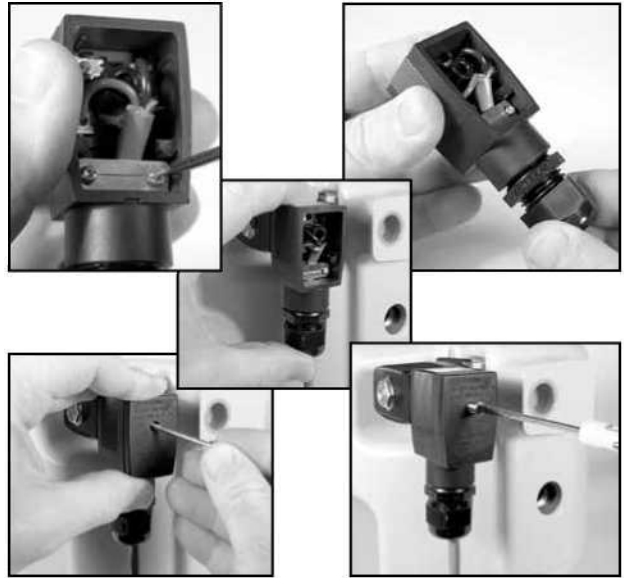

LCR-II

Connect the wires to terminal block J15 on the Lectro Count CPU board. Refer to Figure 11a for additional clarification.

LC³

connect the wires to terminal block J11 on the LectroCount CPU board. Refer to Figure 11b for additional clarification.

LCR-II Connections

Optical Sensor Connection

Wire Color J15 Pin Connection

Red	56
White	55
Black	54

S3 Solenoid Connection

Terminal J15 Pin Connection

1	(Red)
	52
2	(Black)
	53

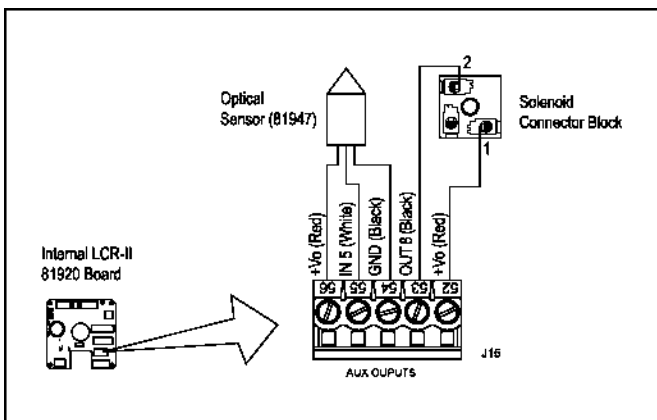


Figure 11a: LCR-II to Optical Air Eliminator Wiring

LC³ Connections

Optical Sensor Connection

Wire Color J11 Pin Connection

Red	33
White	34
Black	35

S3 Solenoid Connection

Terminal J11 Pin Connection

1	(Red)
	31
2	(Black)
	32

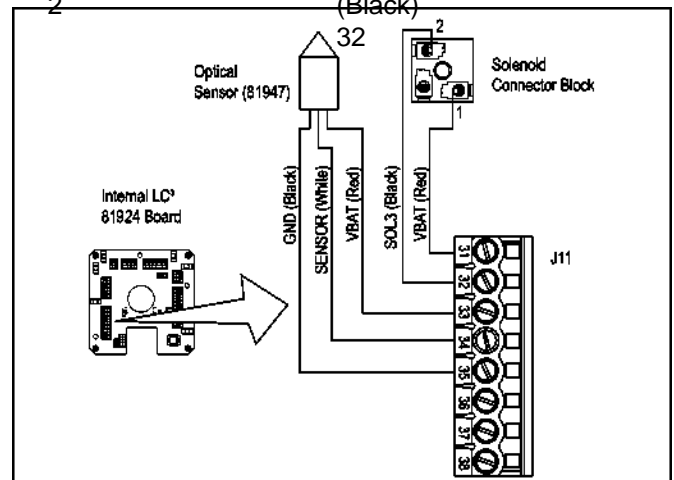


Figure 11b: LC³ to Optical Air Eliminator Wiring

! WARNING

Before disassembly of any meter or accessory component, **ALL INTERNAL PRESSURES MUST BE RELIEVED AND ALL LIQUID DRAINED FROM THE SYSTEM IN ACCORDANCE WITH ALL APPLICABLE PROCEDURES.**

Pressure must be 0 (zero) psi. Close all liquid and vapor lines between the meter and liquid source.

Failure to follow this warning could result in property damage, personal injury, or death from fire and/or explosion, or other hazards that may be associated with this type of equipment.

Tools required:

- Flat blade screwdriver
- 14mm box end or open end wrench



Disassembling

The optical air eliminator consists of a housing, optical sensor, and control solenoid valve. Of these three components, only the solenoid valve is serviceable; however, if any part of the solenoid is damaged, a new solenoid assembly (Part Number 502011) must be ordered. The optical sensor contains no serviceable parts because the internal components are potted. If the optical sensor fails, the complete assembly must be replaced (Part Number 81947).

Step 1

Loosen the thin hex nut holding the solenoid in place using a 14mm wrench. Remove the nut and coil off of the armature guide post.

Step 2

Remove the plastic bonnet from the armature guide post. This should be easy to remove without tools.

Step 3


Using a screwdriver, loosen the upper left and lower right screws of the valve body. These are the only two screws which hold the valve body in place. The upper right and lower left screws fasten the armature guide post and valve body together. Remove the valve body from the optical air eliminator housing.

Maintenance

Disassembling


Step 4

Place the valve body on a flat surface. Using a flat blade screwdriver, remove the two screws which hold the armature guide post and valve body together. Lift the armature guide post off of the valve body. The internal components consist of a plunger and a spring. Inspect the spring for damage.

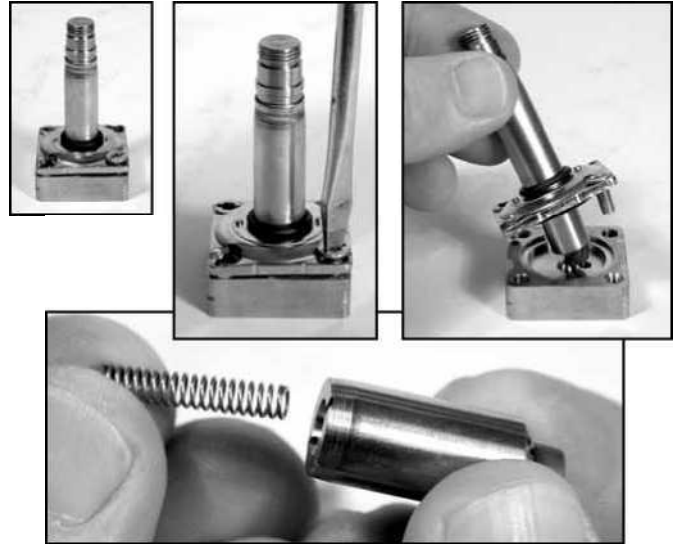


Step 5

The armature guide post is composed of four components: two O-rings, the guide post, and the flange. Inspect these components for damage.

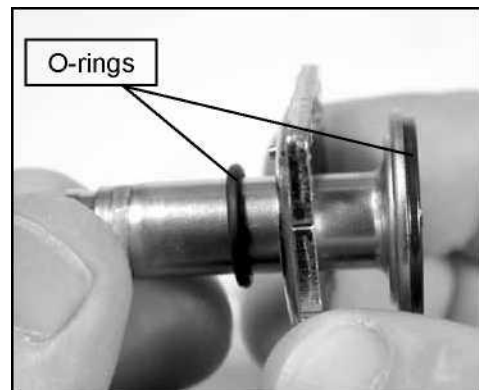

Step 6

The valve body has two O-rings found on the face which faces the housing. These two O-rings are identical. Inspect these for damage. Inspect the ports for blockage.

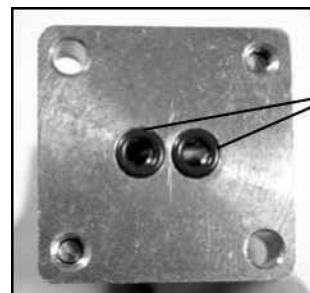

O-rings

Maintenance

Reassembling

Step 1


Place the spring inside the plunger and insert the plunger, spring end first, into the armature guide post. Place the armature guide post assembly on the valve body.

Fasten the armature guide post to the valve body using the two screws removed earlier. Two holes of the valve body are threaded and two are not. Make sure the screws are being inserted into the threaded holes.


Note that the valve body has a number stamped into it. This will be used to set the proper orientation of the solenoid valve body with respect to the optical air eliminator housing assembly.



Number Stamp

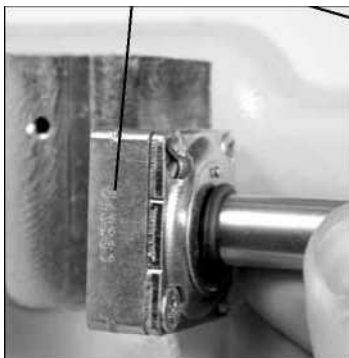

Position solenoid valve body with number stamp in this location

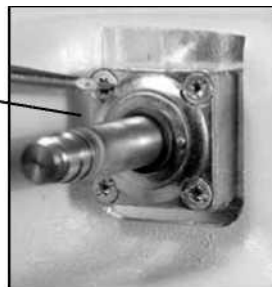


Step 2

Align the solenoid valve body so that the stamped number on the valve body faces the housing assembly as shown in the picture to the left. The valve body can physically be fastened to the housing assembly in one of two orientations. Only one orientation is correct.

IMPORTANT!

If the stamped numbers face away from the housing, the optical air eliminator will not function properly. The port will be blocked and the air eliminator will fail.

With the valve body in the proper orientation, fasten it to the housing using the two screws removed earlier. Tighten to a torque of 15 to 18 in-lbs (1.7 to 2.0 Nm).

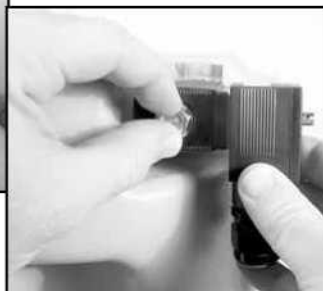

Step 3

Place the plastic bonnet over the valve body and snap in place.

Step 4

Place the coil over the armature guide post and fasten with the thin hex nut. Tighten the nut with a 14mm wrench to a torque of 4.5 in-lbs (0.5 Nm).

Maintenance

! WARNING

Before disassembly of any meter or accessory component, **ALL INTERNAL PRESSURES MUST BE RELIEVED AND ALL LIQUID DRAINED FROM THE SYSTEM IN ACCORDANCE WITH ALL APPLICABLE PROCEDURES.**

Pressure must be 0 (zero) psi. Close all liquid and vapor lines between the meter and liquid source.

Failure to follow this warning could result in property damage, personal injury, or death from fire and/or explosion, or other hazards that may be associated with this type of equipment.

Optical Sensor

If the optical sensor ever needs replacement, use a 1" open end wrench to remove the optical sensor from the housing. When installing a new optical sensor, care should be taken not to exceed a torque of 75 in-lbs (8.5 Nm). Excessive torque may damage the sensor.

A light coating of grease or anti-seize lubricant should be applied to the threads of the sensor prior to assembly.



Troubleshooting

PROBLEM

Excessive liquid flowing out of vent to spit tank.

Scenario 1: Solenoid not closing.

- Check S3 solenoid wiring.
- Measure resistance across S3 solenoid. Value should read approximately 15 Q. If not, replace S3 solenoid.
- Inspect S3 solenoid for blockage. Refer to disassembly instructions.
- LectroCount CPU failure. Replace CPU board.

Scenario 2: Optical Sensor not functioning.

- Check optical sensor wiring.
- Measure resistance between the RED and WHITE wires. Value should be approximately 10kQ. If not, replace optical sensor.
- LectroCount CPU failure. Replace CPU board.

PROBLEM

No liquid flowing through meter during delivery.


Scenario 1: Liquid level not rising in optical air eliminator.

- Check S3 solenoid. It may not be opening to allow air/vapor to vent.
- Check S3 solenoid wiring.
- Measure resistance across S3 solenoid. Value should read approximately 15 Q. If not, replace S3 solenoid.
- Inspect S3 solenoid for blockage. Refer to disassembly instructions.
- LectroCount CPU failure. Replace CPU board.

Scenario 2: Meter outlet valve not opening

- Check wiring of the outlet valve S1 solenoid.
- Measure resistance across S1 solenoid. Value should read approximately 15Q. If not, replace S1 solenoid.
- Inspect S1 solenoid for blockage. Refer to the manual which accompanies the valve.
- LectroCount CPU failure. Replace CPU board.

Bill of Materials - Exploded View

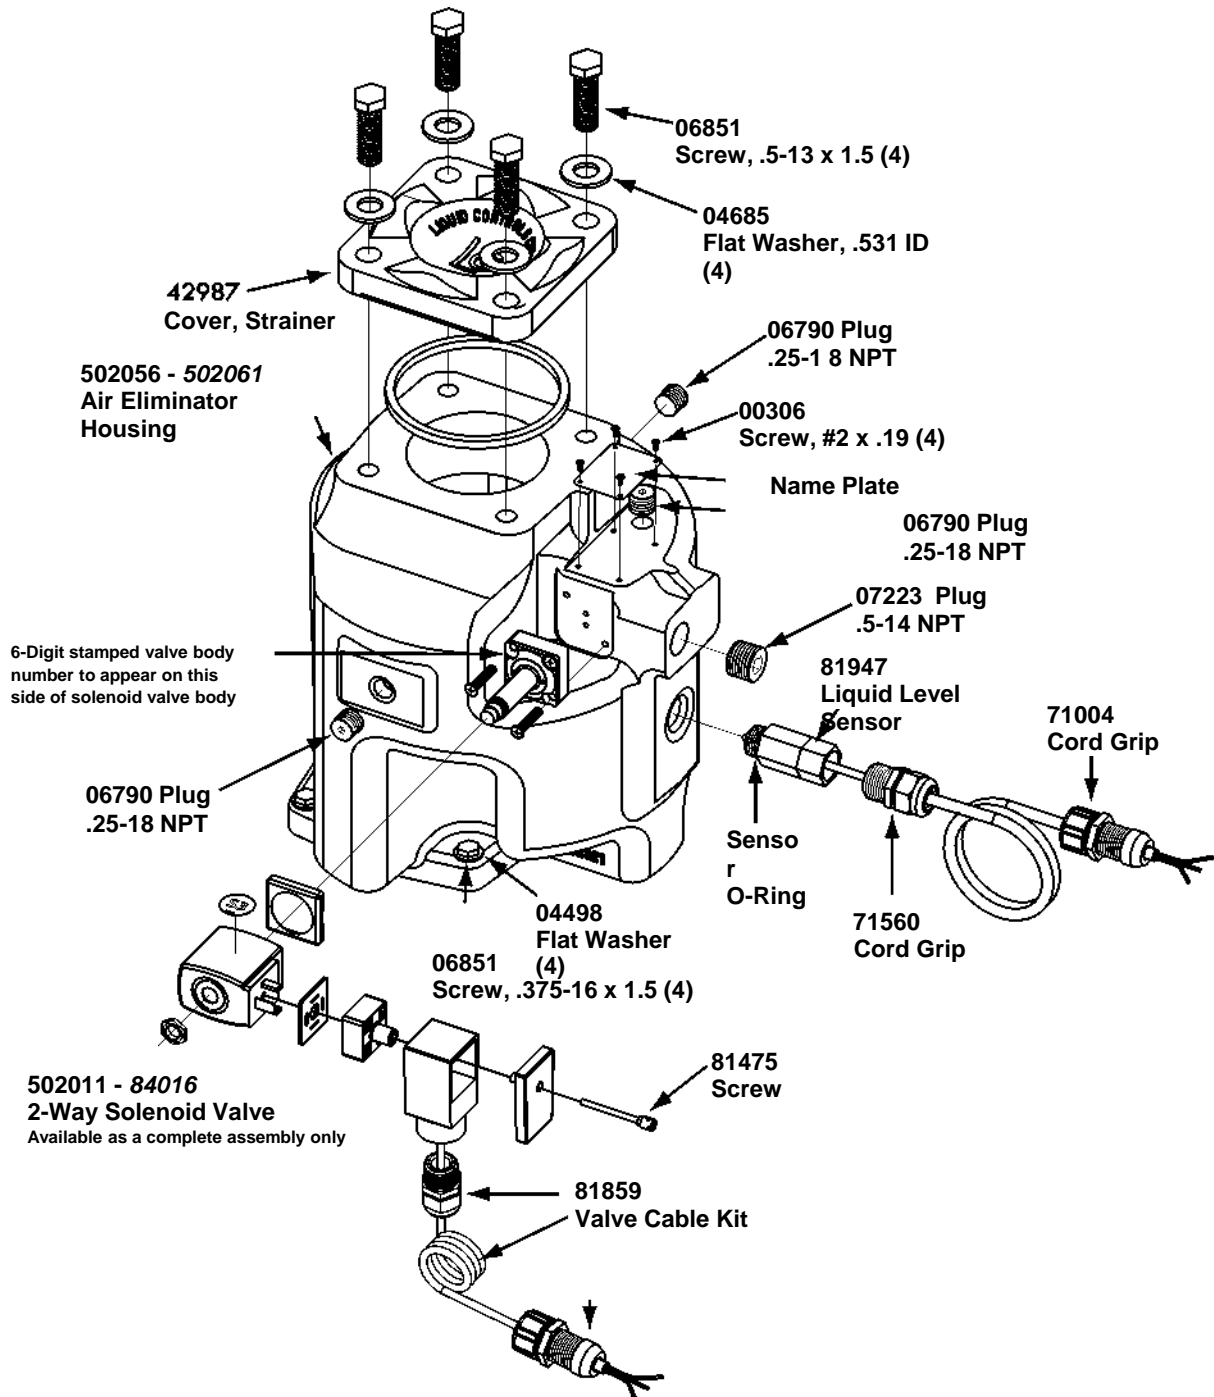

Model Number: A8981 & A8981A

Italicized part numbers indicate A8981A (Class 2) parts. If there is no italicized number, the listed part number applies to A8981 & A8981A

LIQUID CONTROLS GROUP

CORKEJV * FAURE HERMAN • LIQUID CONTROLS • SfiJWPf • SPONSLER • ГОР1ЕСМ SYSTEMS

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06

Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курган (3522)50-90-47
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13

Россия +7(495)268-04-70

Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Ноябрьск (3496)41-32-12
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37

Казахстан +7(7172)727-132

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саранск (8342)22-96-24
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97

Киргизия +996(312)96-26-47

Тверь (4822)63-31-35
Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Улан-Удэ (3012)59-97-51
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93